





47C200 - Centaur (9v) installation

Operating instruction
Betriebsanweisung
Mode d'emploi

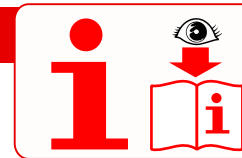


SAFETY HINTS
SICHERHEITSHINWEISE ELECTROZAUN
INFORMATIONS DE SÉCURITÉ



- 1
- 2
- 3
- 4
- 5
- 6

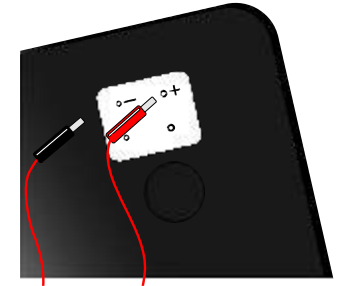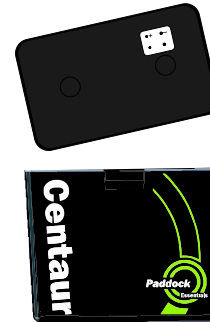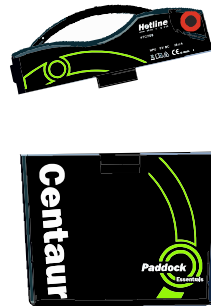

- 7
- 8
- 9
- 10
- 11

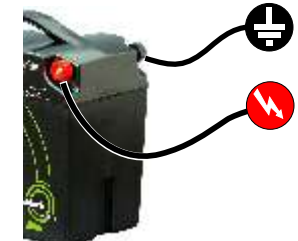

- 12
- 13
- 14

 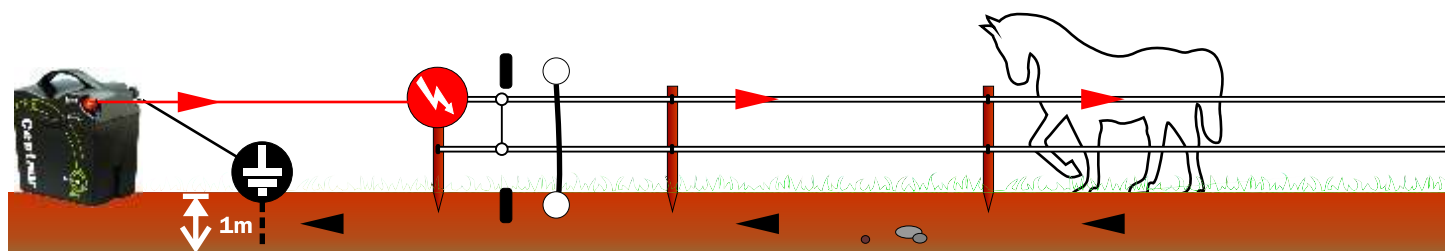

1 per sec



